



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1		Upper Housing	
1a	22611	Upper Housing (Pro Pet)	1
1b	22613	Upper Housing (Trendsetter)	1
1c	65294	Upper Housing (Experience)	1
2	21873	Cord Set	1
3	22684	Insulator Sheet (Mylar)	1
4	22683	Insulator Sheet (Capaco)	1
5	65842	Hanger Hook	1
6		Lower Housing	
6a	22629	Lower Housing	1
6b	65901	Lower Housing Experience	
7	22423	Rear Housing Screw	2
8	22274	Front Housing Screw	2
9	65828	Rear Motor Mounting & Switch Screw	1
10	21749	Switch Actuator	1
11	21769	Front Motor Frame	1
12		Blade Hinge	
12a	28194	Blade Hinge (TrendSetter)	1
12b	28193	Blade Hinge (Pro Pet)	1
13	27864	Blade Hinge Screw	2

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
14	21255	Motor/Drive Frame Mounting Screw	2
15	S20651	Blade Drive Assembly	1
16	-	-	-
17	64013	Tension Spring (#10 Blade)	1
18	64027	Blade Guide	1
19	64003	Blade Bracket	1
20	64139	Blade Screw	2
21		Motor and Cam Assembly	
21a	22898	Motor and Cam Assy - Pet	1
21b	22899	Motor and Cam Assembly - Human	1
22	65059	Switch and Control Board	1

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be **CLEANED** and **OILED** with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S., attach a letter to outside of package explaining difficulty.