

Wahl Switchblade Model 8881

#	Part Number	Item Description	
1	92600	Top Case - Housing	
2	92630	Bottom Case - Housing	
3	94284-001	Hanger Hook (Bale)	
4	00492-200	Housing Screw 3x1/2 Type 25 (Pan)	
5	99716	Motor Mount Screw	
6	90400-001	Gasket	
7	88700	Blade Release Button (Latch)	
8	96452	Hinge Screw (#6 32x.203)	
9	96433	Front Cover Screw (#2x.328)	
10	88301-360	Front Cover Chrome	
11		Detachable Style Blade	
12	97749-100	Hinge	
13	95290-003	PC Board Assy Rotary	
14	96466	Switch Nut	
	96467	Switch Nut Washer (not pictured)	
15	92005	Switch Knob	
16	These parts are now only available as part of #22 Motor assy		
17			Drive Tip
18			Drive Finger
19			Cam Follower
20			Guide Pin
20		Motor Mount Assy	
21	97812-106	New Cord w/o Plug	
	97615-402	Plug (not pictured)	
22	96702-003	Motor 12v 5000 RPM	

