andis®

MODEL MA–1 CLIPPER
120 VOLT

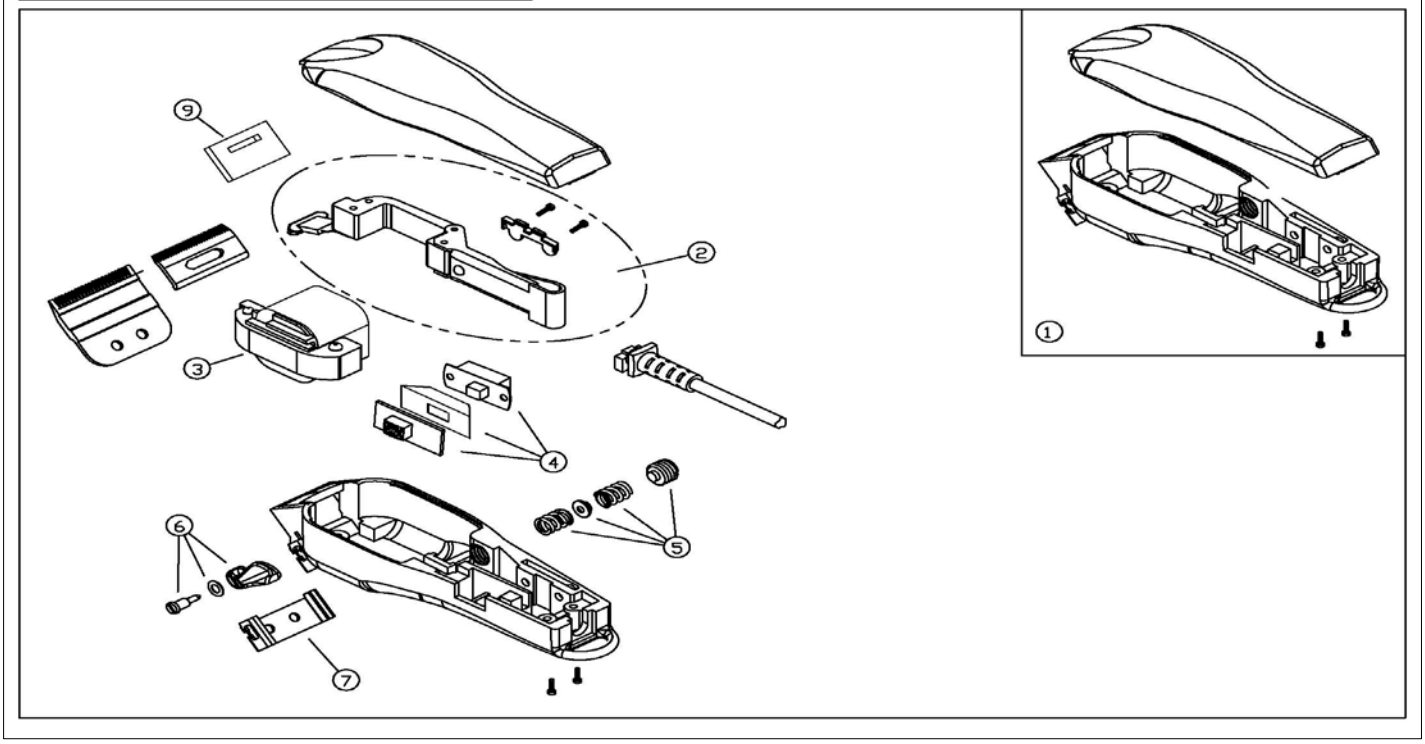

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1		Housing Assembly (Includes Upper Housing, Lower Housing, Screws, and Label)	
1a	18343	Upper Housing (Platinum with "Paw Print" logo) and Lower Housing (Black with "Andis" logo)	1
1b	18344	Upper Housing (Chrome with "Andis" logo) and Lower Housing (Black with "Oil Befor eEach Use" logo)	1
1c	18348	Upper Housing (Chrome with "Striped Andis" logo) and Lower Housing (Black with "Blank Striped" logo)	1
2	19101	Armature Assembly	1
3	19107	Field Assembly	1
4	18373	Switch Assembly	1
5	19108	Adjustment Spring Replacement Kit	1
6	18368	Lever Assembly	1
7	19104	Blade Bracket	1
8		Cord	
8a	17631	Cord (UL) - 8 Foot	1
8b	18338	Cord (UL) - 6 Foot	1
9	18461	Hair Guard	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use, If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.