andis®

MODEL PMT CLIPPER
120 VOLT

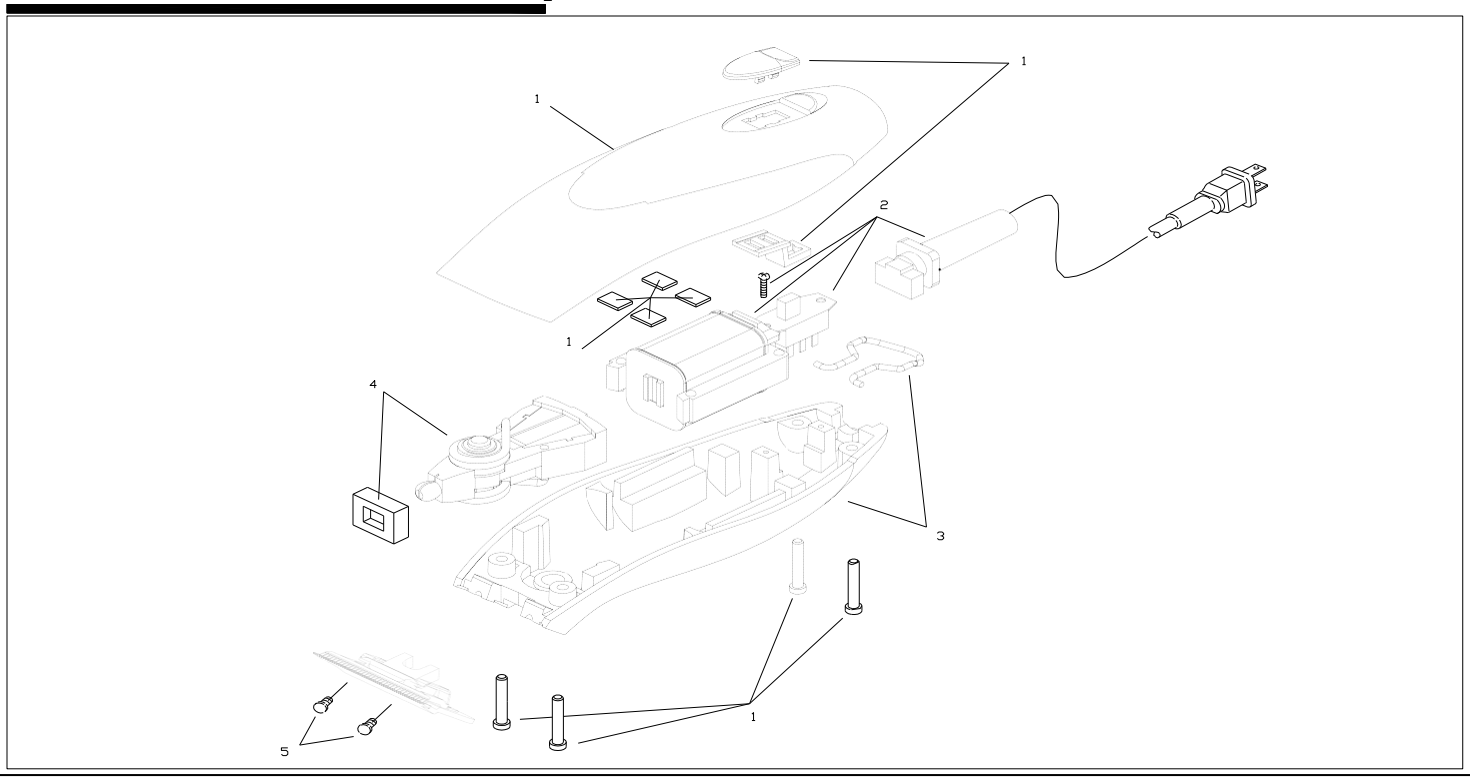

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'
1	23674	Upper Housing Assembly (Includes upper housing, switch button, switch actuator, 4 cushions, and 4 housing screws)	1
2	23671	Field Assembly (Includes field, switch, switch screw, and cord)	1
3		Lower Housing Assembly (Includes lower housing, hanger hook, and 4 housing screws)	
3a	23672	Lower Housing Assembly (UL)	1
3b	23673	Lower Housing Assembly (CUL)	1
4	23658	Armature Assembly	1
5	23659	Blade Assembly Screws (Qty 2)	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use, If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.